




Step 1: Assemble all components on cable as following and strip the cable as following.

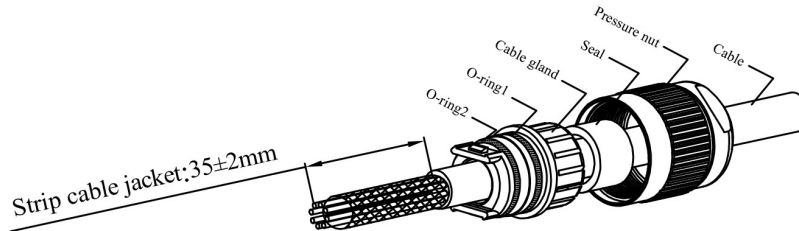


Step 2: Push the braid back to the cable gland and assemble the sleeve.

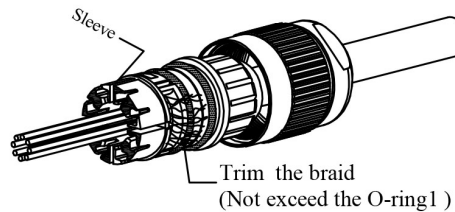

Step 3: Assemble the nut tightly on the main body and press the wires in the sleeve.

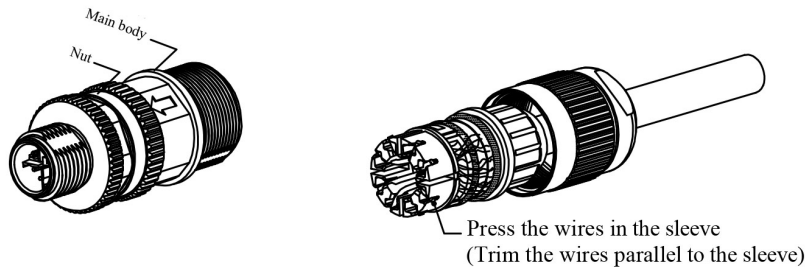

Step 4: Insert the sleeve in the main body and assemble the pressure nut tightly on the main body.
(Use SW16 and SW17 wrench)

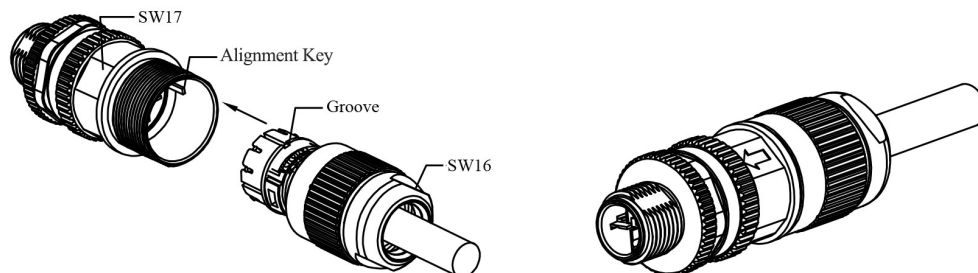

⚠ Note: Make the Alignment Key align with the groove of sleeve.